# **4K HDMI 100M KVM Extender**

# **User Manual**



Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

#### I. Introduction

The 4K HDMI KVM Extender--Extend USB Keyboard, Mouse, and HDMI video signals up to 328ft (100m) over CAT6/6a/7 cable, and you can display on 3 compatible monitors meanwhile. And you can use 2 USB ports on the Receiver (RX) to control your PC at a remote location.


### II. Features

- 1. Support HDMI1.4 and HDCP1.4.
- 2. Supports uncompressed data transmission at 4K @30Hz with near zero latency.
- 3. Supports PCM, LPCM, Dolby, DTS audio formats
- 4. Supports 3.5MM audio output on TX & RX.
- $5. \hspace{0.5cm} \hbox{Equipped with an HDMI Loop-out on the TX for a local display,} \hbox{and 2 HDMI output on the RX}.$
- 6. Equipped with 2 USB ports on the Receiver (RX) to control your PC at a remote location with a USB keyboard and mouse.
- 7. Supports IR control

## III. Specifications

Bandwidth	10.2 Gbps
Input	TX:1* HDMI,1* PC,
	RX:1* HDMI,1* RJ45,1*IR
Output	TX:1* RJ45,1*3.5mm(audio out),1*HDMI(Loop out),1*IR
	RX:2* HDMI,1*USB Type A,1*USB Type B,1*3.5mm(audio out)
Max resolution	4k@30Hz
Transmission range	328ft (100m) over CAT6
Audio support	PCM, LPCM, Dolby, DTS
Power Supply	DC 5 V 2 A
ESD Protection Human Body Model:	± 8kV (air-gap discharge)
	$\pm 4kV$ (contact discharge)
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F
Storage Temperature	-20°C ~ 60°C / -4°F ~ 140°F
Relative Humidity	20 ~ 90% RH (Non-condensing)
Power Consumption (Max)	20W
Housing	Aluminum alloy
Dimension (L x W x H)	130x100x22(mm)
Weight	TX:260(g)
	RX:250(g)

## IV. Operation controls and Functions

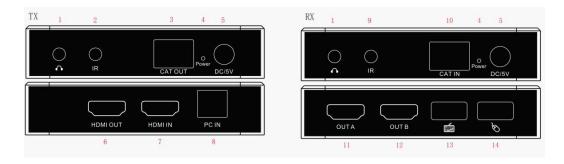

1.3.5 Audio output

2.IR output 9.IR input

3.RJ 45 output for cat6 10.RJ 45 input for cat6

4. power indicator 11.HDMI Output A

5.5V2A power input 12. HDMI Output B

6.Local HDMI output 13.USB for keyboard input

7.HDMI input 14.USB for mouse input

8.USB input from PC

#### V. Connecting and Operating:

- Connect one HDMI cable between source device and TX Extender, and another one HDMI cable between display device and RX Extender.
- 2. Connect single cat-6 cables between TX and RX Extender, the max cable distance is 100 meters.
- 3. Connect 5V/2A power supply to the TX and RX.
- 4. Plug the mouse and keyboard into the port of the receiver, and connect the port of the transmitter with the computer if you need the KVM control function.
- 5. Plug the 3.5mm audio ports when you want to use earphones.
- LED indicator light: Turn it on, the power light is red; when there is a signal input, the yellow light in the RJ45 flashing.

### VI. Packing list

- HDMI KVM CAT6 Extender (TX & RX units)
- IR cables( Transmitter & Receiver)
- 2x Power adapter(5V/2A)

- 1x Operation Manual
- 1x USB cable

# VII. Connection diagram:

