



Brand: JTD
 Model No.: JTD-008
 Item Name: Wireless Karaoke Microphone
 Website: <http://www.jtechdigital.com>
 Telephone: +1 (832) 886-4042
 E-Mail: support@jtechdigital.com
 Address: 12803 Park One Drive, Sugar Land TX, 77478



User Guide

①


1. Technical Specifications & Button Instruction

Technical Specifications

Audio Monitor: Capacitor Type Power Output: 2*5W
 Frequency Range: 100Hz-10KHz Bluetooth Version: 4.2
 Power Charge: DC 5V SPL: 115dB 1KHz THD<1%
 Battery Capacity: 1000mAh

Button Instruction



- EOV: Eliminate Original Voice, press once to lower the voice of the track you are playing, press again to return the voice to normal volume
- Mode: Choose between Bluetooth mode, MicroSD card or Line in (3.5mm)
- Vol - : Turns down the microphone volume, the microphone speaker will beep when the volume is at its softest
- Vol + : Turns up the microphone volume, the microphone speaker will beep when the volume is at its loudest
- <Prev : Press once to play the previous track/file; hold down to lower the volume of the microphone speaker
- Next> : Press once to play the next track/file; hold down to raise the volume of the microphone speaker
- Power/Play/Pause: Hold down to power on or power off; press once to pause or play the track/file
- Power/Charging Indicator: The LED will shine blue when the microphone is powered on, the LED will shine red when the microphone is charging. The red LED will turn off once the microphone is finished charging.

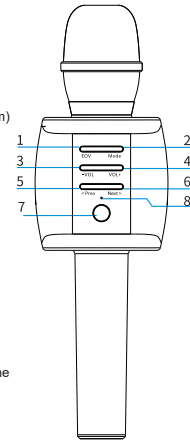

②


Connection Jack, Accessories, Charging Instructions

Connection Diagram

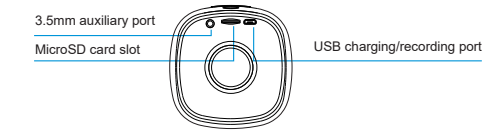

Charging Instructions

- The microphone will automatically power down when the battery is too low
- Charge the microphone using the supplied USB cable with any USB power adapter (not included). When the microphone is charging the LED on the front of the microphone will shine red
- The microphone requires 4-5 hours to charge to full power. The red LED will turn off once the microphone is fully charged
- With a full charge, the microphone will work for 6-8 hours

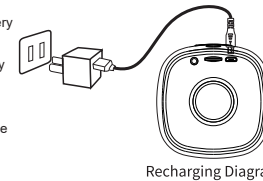

③


3. Operation

1. Bluetooth Mode

- Turn on the microphone, the blue LED will come on and you will hear a greeting from the speaker, followed by "Bluetooth mode" to indicate that Bluetooth is enabled
 - Search Bluetooth ID "JTD-008" on a smart phone or tablet to connect. Once the microphone is successfully connected you will hear an indication from the speaker.
- Note: Press "0000" on smart phone/tablet for the password prompt when making the Bluetooth connection.
- Play a music app on your smartphone or tablet, such as Spotify, iTunes, Pandora, etc., to listen through the microphone speakers and sing along
 - Mix and match the microphone and music volume for the best karaoke singing

2. Recording Karaoke

- Connect a micro USB to 3.5mm cable to the microphone
 - Connect the 3.5mm jack to a smart phone or tablet
 - Play a music app on your smartphone or tablet, such as Spotify, iTunes, Pandora, etc., to listen through the microphone speakers and sing along and record
- Note: If there is a MicroSD card in the microphone, select the Line In mode and connect the smart phone or tablet in the same steps mentioned above. If there is no MicroSD card the microphone will not record anything

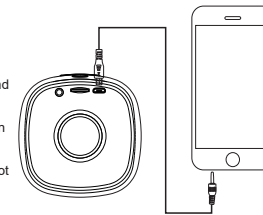

④

Common Problems & Solutions

Problem	Reason	Solution
Power LED indicator is not on	<ul style="list-style-type: none"> Power is low, Charging cable is damaged or broken 	<ul style="list-style-type: none"> Charge the microphone to full power Check and replace the charging cable
Microphone has no sound	<ul style="list-style-type: none"> Microphone is not powered on Volume is turned all the way down 	<ul style="list-style-type: none"> Make sure the microphone is powered on Turn the microphone volume up
Noise when singing or recording	<ul style="list-style-type: none"> Noise from the environment Mobile signal interference Music App setting issue 	<ul style="list-style-type: none"> Move to a more quiet setting Move the microphone further from the smartphone or tablet Close and re-open the music App
Recording quality is poor	<ul style="list-style-type: none"> The microphone is not compatible with certain mobile phones 	<ul style="list-style-type: none"> Reboot the phone or use another smartphone
Music cuts out when in Bluetooth mode	<ul style="list-style-type: none"> The microphone is too far away from the smartphone Obstacles are blocking the microphone from the smartphone 	<ul style="list-style-type: none"> Move the microphone closer to the smart phone Move around or avoid obstacles between the microphone and smartphone
Music is not loud enough	<ul style="list-style-type: none"> Smartphone volume is too low Original music file or App volume is too low 	<ul style="list-style-type: none"> Turn up the volume on the smartphone Choose another music file of higher quality or a different music App
Bluetooth cannot connect to the smartphone and other software or cannot be recorded	<ul style="list-style-type: none"> The music App does not support Bluetooth audio output 	<ul style="list-style-type: none"> Choose a proper music player App that supports Bluetooth audio output

⑤

5. Chemical Substances & Warning

1. Chemical Substances

Harmful substance	Elements			
	PCB	batteries	accessories	Metal cabinet
PB	○	○	○	○
Hg	○	○	○	○
Cd	○	○	○	○
Cr, VI	○	○	○	○
PBB	○	○	○	○
PBDE	○	○	○	○

O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit specified in ISO / IEC 6572-2011 standards.
 X: Indicates that the hazardous substance is at least in the content of one of the materials in the part exceeding the limits specified in GB / T 26572-2011 standards.
 Depending on the component and component manufacturer, the warranty period on the product and its components may vary. The expiry date on the component takes precedence over any conflicting or different environmental expiry date on the product.



in the markings indicate the life of the product environment. Electronic products must identify this symbol in China.
2. Warning
 Use a soft, dry cloth to clean the product. Do not use any alcohol, ammonia benzene, or other chemicals as this may cause damage to the product.
 To prevent the risk of fire or electric shock, do not expose the product to rain or moisture. Battery does not contain mercury, and do not puncture or burn.

⑦

6. Warranty Information

Manufacturer's Warranty (1 year)

- J-Tech Digital Inc warrants the JTD-008 Wireless Karaoke Player to be free from defects in workmanship and materials, under normal use and service for a period of 1 year from the date of purchase from J-Tech Digital Inc or one of its authorized resellers.
- If the product does not operate as warranted during the applicable warranty period, J-Tech Digital Inc shall, at its option and expense, execute one of the following as necessary:
 repair the defective product or part
 Deliver to the customer an equivalent product or part to replace the defective item
- All products that are replaced become the property of J-Tech Digital Inc. Replacement products may be new or reconditioned. Repaired or replaced products are covered for the remainder of the warranty period.

7. Service Instruction & Technical Support

Warranty Information

- J-Tech Digital Inc shall not be responsible for any software, firmware, information or memory data loss of contained in, stored on or integrated with any products returned to J-Tech Digital Inc for repair/replacement under warranty.

Customer Service & Technical Support

- If there is a quality problem within the first 30 days after the purchase dates, buyers can return the item for a refund. If the device is defective, the buyer can have the device replaced on behalf of J-Tech Digital within 1 year of their original purchase date. Buyer must provide a proof of purchase and order number for all refunds or replacements.
- Any customer service or technical support inquiries can be submitted to the support team via phone or email:

J-Tech Digital support team
 Monday—Friday, 9AM-6PM CST
support@jtechdigital.com
 1-888-610-2818

⑧